

1/4" TRS & mini TRS, (J3/J4 and J5/J6) are in parallel. Use only one at a time.

