

JU1

Install to connect XLR pins to chassis ground

JU2



Install to connect XLR pins to power ground



Install to connect XLR pin 1 to shield ground

JU3, JU4

Install for left and right in parallel
Remove for left only

