


When programmed for stereo operation:


L & R XLR feed both RJ45's in stereo.

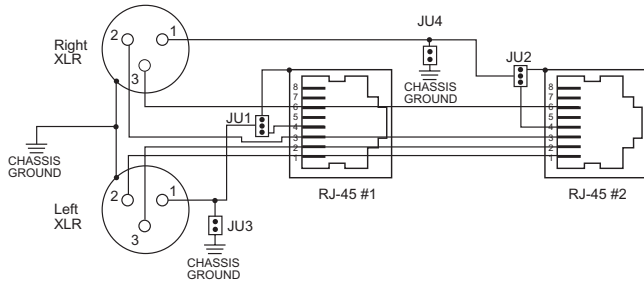

When programmed for mono operation:

Left XLR feeds RJ45-1, pins 1 & 2 only.

Right XLR feeds RJ45-2, pins 1 & 2 only.

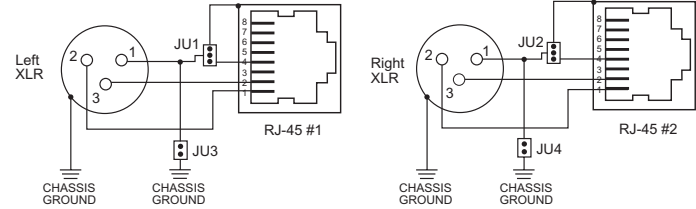

To configure for stereo operation

- JU5
- JU6
- JU7, JU8, JU9, JU10

XLR PIN1 select jumper

Install JU3 to connect Left XLR pin 1 to chassis ground

Install JU4 to connect Right XLR pin 1 to chassis ground

StudioHub+ RJ45 "A" for mono only or stereo operation

StudioHub+ RJ45 "B" for stereo operation

To configure for mono operation

- JU5
- JU6
- JU7, JU8, JU9, JU10

RJ45 shield and ground select jumpers

Left Right
 JU1 JU2 Install to connect XLR Pin 1 to RJ-45 shield

JU1 JU2 Install to connect XLR Pin 1 to RJ-45 power ground (RJ-45 pin 4)

