



- JU1  
Install to connect shield ground to chassis ground
- JU2  
Install to connect shield ground to power ground
- JU3  
Install/remove to reverse direction of rotary encoder

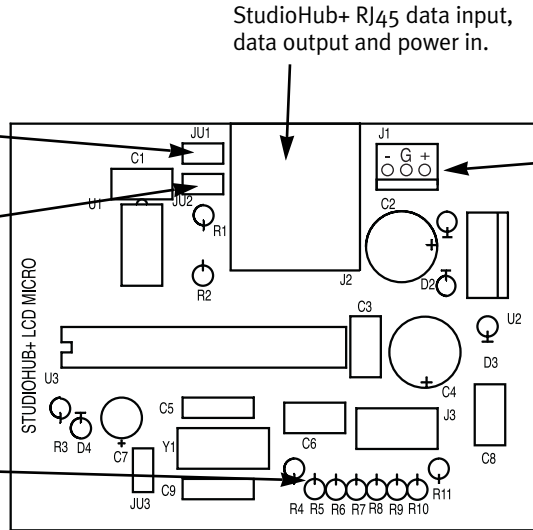

This board must be used in conjunction with the LCD display board.

Direct power input  
+/- 15 volts DC

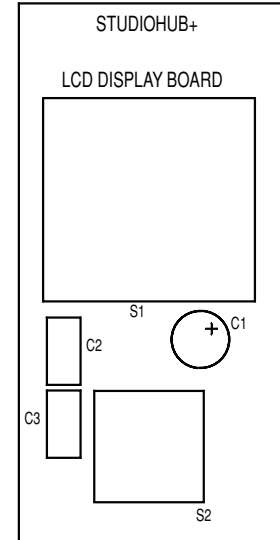

This board to be used in conjunction with the LCD micro board